

WALL CABINETS MY

The Merianto medical hospital furniture series is based on the ISO module system, using 600×400 mm and 400×300 mm baskets. The dimensions of the cabinets correspond to the dimensions of the modular system. The **MY** wall cabinets are designed for baskets with widths of 600 mm, 400 mm and 300mm. It is possible to custom assemble the contents of the cabinets as required, using the baskets and shelves of the modular ISO system.


The medicine cabinets are produced from quality melamine. The selection of materials also includes antibacterial surface finishes. The doors open to 220°.

Facade options are:



Open front Door Glass door Pivot slide door Tambour door Flap door

Standard options include five different finishing's:

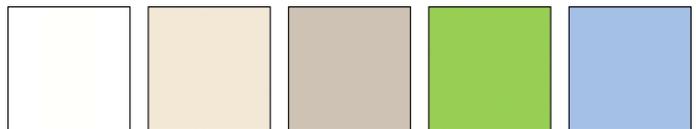


W1100 U222 U702 U630 U522
 Alpine white Crema beige Cashmere grey Lime green Horizon blue

It is also possible to select from a wider variety of different colours and finishes from the catalogues of melamine producers, the availability of which must be verified at the time of ordering.

- It is possible to custom assemble the contents of the cabinets according to the user's needs, using the baskets, shelves and drawers of the ISO modular system.
- The baskets can withstand loads of up to 14 kg. on side panels.
- All facade types are lockable. The locks can be serialized as desired so that they are compatible with other cabinets in the same room, floor or similar area. The base selection includes a mechanical furniture lock, but an electronic code lock or chip card lock can also be selected.
- The doors have silicone magnets that ensure secure and soft closing.
- It is possible to integrate sensor-controlled LED lighting into all the cabinets.
- Handles are 128 mm long and have an antibacterial surface finish.
- It is possible to equip the cabinets with angled tops that assist in avoiding dust collecting on the tops.
- ISO baskets have many different accessories, dividers, label holders etc., that create order and save space in the cabinets.



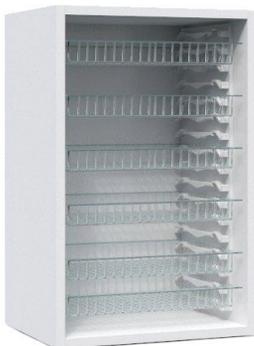

M-Y4
M-Y6



M-Y4U
M-Y6U



M-Y4R
M-Y6R



M-Y6U-T



M-Y4F
M-Y6F

WALL CABINETS M-Y DIMENSIONS

Cabinets are intended for L600 x 400mm and L400 x 300mm baskets

| DESCRIPTION | | Width mm. | Depth mm. | Height mm. |
|--------------------------------|----------|--------------|--------------|---------------|
| Cabinet without door | M-Y4 | 455 | 370 | 700 |
| Cabinet without door | M-Y6 | 655 | 470 | 700 |
| Cabinet with door | M-Y4U | 455 | 370 | 700 |
| Cabinet with door | M-Y6U | 655 | 470 | 700 |
| Cabinet with glass door | M-Y4U-KL | 455 | 370 | 700 |
| Cabinet with glass door | M-Y6U-KL | 655 | 470 | 700 |
| Cabinet with roller door | M-Y4R | 455 | 370 | 700/850 |
| Cabinet with roller door | M-Y6R | 655 | 470 | 700/850 |
| Cabinet with flap door | M-Y4F | 455 | 370 | 700/850 |
| Cabinet with flap door | M-Y6F | 655 | 470 | 700/850 |
| Cabinet with pivot slide doors | M-Y6U-T | 798 | 470 | 2100 |

The product page displays the standard solution dimensions and finishing's of Merianto Medical furniture.

It is possible to prepare custom solutions of these products adapted according to the wishes of the client. and to use different finishing materials that are suited to the client's project.

Ask the Merianto representative for more information.